Unpack, Set-Up & Plug in! Optional 12V Inverter Available



Stage Work Load 2 for Maximum Production



BEFORE USE REFER TO USER MANUAL FOR DETAILED INSTRUCTIONS 5

3 Set Custom Cutting Conditions for Wet or Dry. Start Bucking!




4 30sec. No tool Tear Down for Power Wash





PortaBucker FEATURES

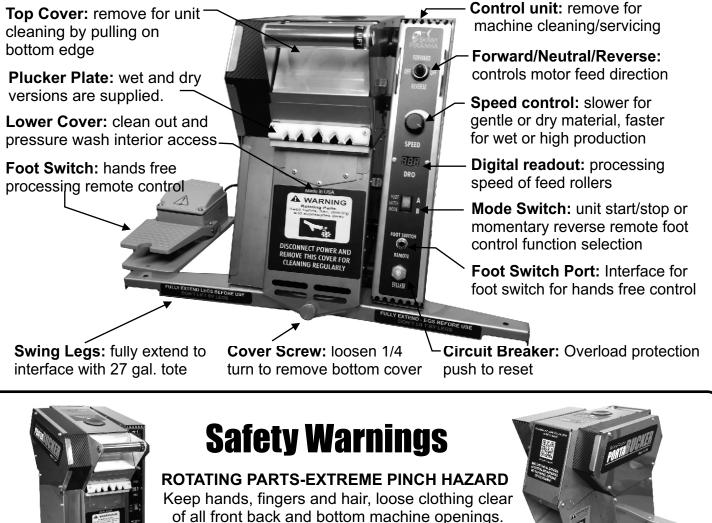

NEVER RUN MACHINE

without all covers installed.



NOTE: Always use a minimum 14AWG extension cord and grounded outlet for AC operation. When using optional 12V inverter, make sure host vehicle has sufficient capacity to supply power.



CLEANING PROCEDURE

Deep Cleaning: To ensure proper performance and mitigate contamination, you must clean PortaBucker interior and exterior surfaces. Only use mild soap and water or 90% alcohol for cleaning.

Separate control unit and cables from PortaBucker, this prevents water damage to critical components. Failure to do so will void warranty.

Remove top/bottom covers and plucker plate to expose interior cavity and drive wheels.

Pressure washing is acceptable if proper care is taken, don't direct full spray directly on decals. When cleaning drive rollers rotate them by hand to expose all needed areas. Use a putty knife to remove tough deposits on rubber surfaces.


PortaBucker Processing Tips:

Automated processing is never as gentle as hand methods, PortaBucker's exclusive technology can yield results as close to hand bucking as possible.

The critical factors for successful bucking are: Material strain and density, preparation, water content, feed rate and choice of proper plucker plates.

Wet material usually requires higher feed rates and the more aggressive plucker plate. Dry material results are best with an RH value of 15-20% If flower is too dry, brittle or lacks sufficient structure, flower damage can occur.

- (1) Set PortaBucker securely on 27 gal. tote or, sturdy work table, attach control unit, connect motor cable. Place appropriate stem catch container at rear of machine. Many use an additional 27 gal. tote. Select "Plucker plate" most users prefer the aggressive plate w/diamond shaped holes. Connect foot switch control cable to jack on lower front of controller, and then plug main power cable into proper AC power source. DRO will display a value of 98 or lower when unit is ready.
- (2) Start machine, adjust speed to about 75%. Manually select forward direction to test functionality. Stop machine. Start machine again using the direction switch on controller or the foot switch. The mode selector switch will allow foot switch to control start/stop or momentary reverse functions allowing you to keep your hands free to more efficiently load product into Portabucker. Stop machine, now you're ready to start bucking.
- (3) Start machine with forward command, insert stem into smallest sized hole in plucker plate that will accept the stem release stem when unit draws it in. Adjust speed to suit your requirements.

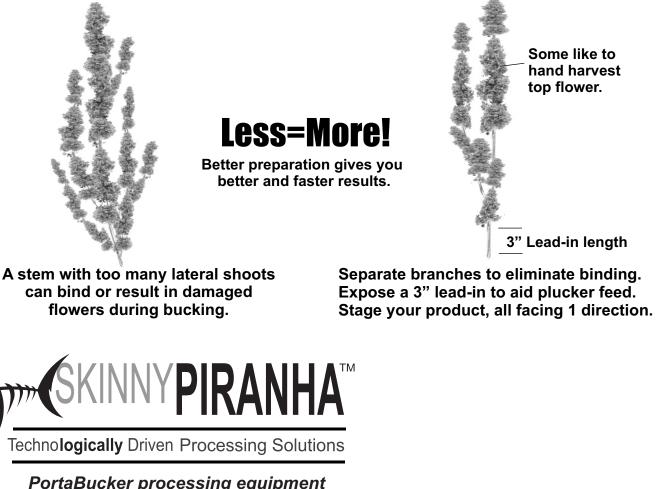

PortaBucker processing equipment Trimbuddy series trimmers FlashDry&Cure